


 
 
 
 







 
 
 
 
 
 


 
 

 
 

 
 
 




Original	Rechange	Original	Rechange
	Power		Power
			Picture / Format
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	IPTV		Display / Media
	Eco / Search		Fav / Marker / PC
	Guide-Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle





 

 

 

 



 

 

 





 

 

 

 












 


 

 

 

 

 

 



 











Original	Rechange
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Disc Menu	 D.Menu / Top
 0	 0
 Text / Media	 Text / Goto
 Sound	 Sound / Title
 Repeat	 +  Shift + Green / APP /

Original	Rechange





Original	Rechange	Original	Rechange
	Power		Power
	(•J)		TV/Radio /
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	Iptv		Display / Media
	Eco/Search		Fav / Marker / PC
	Guide/ Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle





Original		Recharge	
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD - STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
DISC MENU	Disc Menu	TOP MENU D.MENU	D.Menu / Top
0	0	HDMI - BAT 0	0
TEXT MEDIA CENTER	Text/ Media	GOTO TEXT	Text / Goto
SOUND	Sound	TITLE SOUND	Sound / Title
REPEAT	Repeat	SIZE ZOOM	Zoom / Size
		SHIFT + APP REPEAT	Shift + Green / APP /

Original		Recharge	

