



 



 

 



 

 

 

 

 
 




 








Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>I	 >>I / Preset+
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 P.Mode	 Picture / Format
 Size	 Zoom / Size
 Sleep	 Sleep / Timer
 Tv/Radio	 TV/Radio /

Original	Rechange
 Index	 D.Menu / Top
 Reveal	 Setup / OPT /
 Text	 Text / Goto
 AV/Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i/Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-





Original		Rechange	
	ATV		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Tv Guide		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Original		Rechange	
	Blue		Blue / Prime Video / Random
	Power/Display		Shift + Power
	Hold		Shift + Stop /
	Aspect		Shift + Picture / Format
	USB		Shift + 8

