























 



 

 



 

 



 



 



 



 

 



 



 









Original		Recharge		Original		Recharge	
	Power		Power		9		9
	PRO/TV/TXT		TV/Radio /		FAV		Fav / Marker / PC
	Slow/Cancel		Shift + Play /		0		0
	Rep/Reveal		Shift + Back / Return		Recall		Back / Return
	TV/AV		AV / Input / RDS		Vol+		Vol+
	<</Hold		<< / Tune-		CH+		CH+ / Page+
	>>/Size		>> / Tune+		Up		Up
	l<</Subpage		l<< / Preset-		Left		Left
	>>l/Index		>>l / Preset+		OK		OK
	1		1		Right		Right
	2		2		Vol-		Vol-
	3		3		Down		Down
	4		4		CH-		CH- / Page-
	5		5		Menu		Menu / Home
	6		6		Exit		Exit / Cancel / Clear
	7		7		Nicam/A2		Text / Goto
	8		8		Display		Display / Media





	Original	Rechange	Original	Rechange
		Mute		Mute / Dimmer
		Picture		Picture / Format
		Sound		Sound / Title
		Sleep		Sleep / Timer
		Subtitle		Subtitle / EQ
		LAN/EPG		Audio / Lang I/II
		Pause		Pause / Step / Freeze
		Play		Play / Slow
		Set/CH/List		Setup / OPT /
		D-Menu/List		D.Menu / Top
		Stop		Stop / Hold
		Record		Rec / Rec Mode
		Open/Close		Eject / Surround
		Red/Zoom		Red / Netflix / Search
		Green/Goto		Green / APP / Repeat
		Yellow/Title		Yellow / YouTube / Repeat
		Blue/Angle/Screen		Blue / Prime Video / Random

