





 




 

 
 






 


 





Original		Rechange		Original		Rechange	
	Power		Power		9		9
	Sleep		Sleep / Timer		EPG		Guide / EPG / -/-
	Screen		Picture / Format		0		0
	Presets		Setup / OPT /		Swap		Fav / Marker / PC
	↔		TV/Radio /		Photo/Music/Movi		D.Menu / Top
	FAV	 + 	Shift + Fav / Marker / PC		World		Smart / List
	Lang		Audio / Lang I/II		Source		AV / Input / RDS
	Subtitle		Subtitle / EQ		Menu		Menu / Home
	TXT		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		C		Exit / Cancel / Clear
	6		6		Disp.		Display / Media
	7		7		Search Mode		Shift + Red / Netflix /
	8		8		Return		Back / Return





Original		Recharge		Original		Recharge	
	CH+		CH+ / Page+		Yellow/Root		Yellow / YouTube / Repeat
	Info		Info / Angle		Blue/Title		Blue / Prime Video / Random
	Vol+		Vol+				
	CH-		CH- / Page-				
	Mute		Mute / Dimmer				
	Vol-		Vol-				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	Play		Play / Slow				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Red/↑/Zoom		Red / Netflix / Search				
	Red/↑/Zoom		Zoom / Size				
	Green/↓/Repeat		Green / APP / Repeat				

