







 





 
























 






















 



 





Original		Rechange		Original		Rechange	
	Power		Power		Input		AV / Input / RDS
	ATV/DTV		Smart / List		Digital Menu		D.Menu / Top
	Tv/DVD		Display / Media		DVD Menu		Menu / Home
	Eject		Eject / Surround		Top Menu		Shift + D.Menu / Top Menu
	1		1		Guide		Guide / EPG / -/-
	2		2		CH+		CH+ / Page+
	3		3		CH-		CH- / Page-
	4		4		Vol+		Vol+
	5		5		Vol-		Vol-
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Enter/CH List		OK
	Info		Info / Angle		Menu/Setup		Setup / OPT /
	Mute		Mute / Dimmer		Exit/Cancel		Exit / Cancel / Clear
	Tv/Radio		TV/Radio /		Return		Back / Return





Original		Recharge	
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	<</REV		<< / Tune-
	>>/FF		>> / Tune+
	>>I		>>I / Preset+
	Red/<I		Red / Netflix / Search
	Green/Pause		Green / APP / Repeat
	Yellow/Play Mode		Yellow / YouTube / Repeat
	Blue/I>		Blue / Prime Video / Random
	Marker		Fav / Marker / PC
	Angle		Shift + Info / Angle
	Repeat A-B		Shift + Yellow / YouTube / YouTube /
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	Audio Select		Audio / Lang I/II
	Zoom/CH RTN		Zoom / Size

Original		Recharge	
	Jump		Sound / Title
	PIC Size		Picture / Format
	Sleep		Sleep / Timer

