




 
 
 
 
 

 

 
 
 
 
 





 
 



 



 
 

 
 

 
 
 
 
 


 
 
 

 
 




	Original	Rechange		Original	Rechange
	Power		Power		I<</UP
	Tv-Out		AV		>>/Dn
	1		1		Stop
	2		2		>/Player
	3		3		>>/FF
	4		4		<</REW
	5		5		Enter
	6		6		Up
	7		7		Down
	8		8		Right
	9		9		Left
	0		0		Display
	Subtitle		Subt		Zoom
	Menu		Menu		Shift + Eject
	Audio		Dual		Options
	Vol+		Vol +		Back
	Vol-		Vol -		Text
					Mute



