





 
 
 



 

 
 
 



 



 






 


 
 


 










 







 










Original	Recharge	Original	Recharge
 Power	 Power	 Guide	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Return	 Back
 3	 3	 Option	 Options
 4	 4	 i/Status	 Info
 5	 5	 Pause/Pause Tv	 Pause
 6	 6	 I<<	 I<<
 7	 7	 >>I	 >>I
 8	 8	 <<	 <<
 9	 9	 >>	 >>
 0	 0	 Play/x1.3	 Play
 Last View	 Pre Ch	 Stop	 Stop
 Radio/Tv	 TV/R	 Function Menu	 Menu
 Internet	 Smart	 Direct Navigator/PopUp	 Shift + Menu
 CH/Page+	 Ch +	 OK	 Ok
 Skype	 List	 Up	 Up
 CH/Page-	 Ch -	 Down	 Down





Original	Recharge
Right/II>	Right
<II/Left	Left
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Rec	Rec
Audio	Dual
Text	Text
STTL	Subt
Prog/Check	Shift + Smart
Setup	Sleep
Display	Shift + Info
Chapter	Shift + Pre Ch
Time Slip	D. Menu
Del	Format
Manual Skip -10s	Shift + Format

Original	Recharge
Manual Skip +60s	3D
AV Input Tv	AV
Power Tv	Shift + Power
CH+ Tv	Shift + Ch +
CH- Tv	Shift + Ch -
Vol+ Tv	Vol +
Vol- Tv	Vol -
Drive Select	Media

