
 
 
 
 
 

 

 

 
 
 
 



 
 
 
 
 

 
 
 
 
 

 

 
 
 







Original	Recharge	Original	Recharge
 Power	 Power	 8	 8
 Mute	 Mute	 9	 9
 Vol+	 Vol +	 0	 0
 Vol-	 Vol -	 Shift + Guide	 Shift + Guide
 Prog+	 Ch +	 PRE	 Pre Ch
 Prog-	 Ch -	 Up/P+	 Up
 [≡]/TXT	 Text	 Down/P-	 Down
 [+]/Display	 Info	 Right/Vol+	 Right
 Tv/DVB-T	 Smart	 Left/Vol-	 Left
 []/Line	 Media	 [II]/Tv Menu	 Menu
 1	 1	 -IXI-/Exit	 Exit
 2	 2	 Timer/Sleep	 Shift + Power
 3	 3	 -I/I-/P.STD	 Shift + Format
 4	 4	 -I/I-/S.STD	 Shift + Dual
 5	 5	 [< >]/P.Size	 Format
 6	 6	 Open/Close	 Eject
7	7	Rec	Rec





Original	Recharge	Original	Recharge
 Stop	 Stop	 [/≡]/Audio	 Dual
 Play	 Play	 [≡♦]/Subtitle	 Subt
 Pause	 Pause	 [≡?]/Goto	 Options
 <</< Slow	 <<	 [≡+]/Program/Me	 TV/R
 Slow >/>>	 >>	 [<≡]/List/Angle	 Shift + Ch -
 I<</<I Step	 I<<	 [≡>]/Bookmark/O	 Shift + Ch +
 Step I>/>>I	 >>I	 [≡o]/Zoom/EPG	 Guide
 Red/Setup	 Red	 [≡X]/Cancel/i	 3D
 Green/Input	 Green	 MS	 Back
 Yellow/Title	 Yellow	 [▼]/Still	 AV
 Blue/Menu	 Blue	 OK	 Ok
 PIP On/Off	 Shift + 3D		
 PIP Source	 Shift + AV		
 PIP Sound	 Shift + TV/R		
 PIP Swap	 Shift + Subt		
 Timer/repeat	 Shift + Text		
 [≡i]/A-B	 Shift + Info		

