 



 




 
 







Original	Rechange
 Power	 Power
 Source	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 TV	 TV/R
 Recall	 Pre Ch
 World	 Media
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 i/Info	 Info
 Guide	 Guide
 [≡]/Text	 Text
 */O	 Format
 */O..	 3D
 Lang	 Dual
 [≡]..	 Subt
 [-O-]	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow





	Original	Recharge	Original	Recharge
	Blue	Blue		
	Rec	Rec		
	Play	Play		
	Stop	Stop		
	Pause	Pause		
	<<	<<		
	>>	>>		
	OK	Ok		
	Up	Up		
	Down	Down		
	Right	Right		
	Left	Left		
	Music/Photo/Movi	Smart		
	Q.Menu	D. Menu		

