 

 






 
 
 

 
 
 



 
 
 
 



 
 


 
 





Original		Rechange		Original		Rechange	
	Power		Power		Info		Info
	Mute		Mute		Exit		Exit
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		OK		Ok
	6		6		CH+		Ch +
	7		7		CH-		Ch -
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Rec		Rec
	Movie		Media		Stop		Stop
	FAV/Repeat		Pre Ch		Play		Play
	Menu		Menu		Pause		Pause
	Lang		Dual		I<		I<<
	EPG		Guide		>I		>>I





Original		Rechange		Original	Rechange
	<</Alt		<<		
	>>/List		>>		
	Red		Red		
	Blue		Blue		
	Green		Green		
	Yellow		Yellow		
	Text		Text		
	Tv/Radio		TV/R		
	Audio	 + 	Shift + Dual		
	Subt		Subt		
	Zoom		Eject		
	Device		AV		
	Time Shift		Format		
	File		Back		
	Mosaic		Smart		
	A.Scan/Goto	 + 	Shift + Smart		

