


 

 
 

 









 
 


 


 

 















 



 






	Original	Recharge		Original	Recharge
	Power		Power		Info
	I<<		I<<		Guide
	<·		Shift + Left		AV
	·>		Shift + Right		Up
	>>I		>>I		Right
	<<		<<		Down
	Play		Play		Left
	>>		>>		Ok
	Sync Menu		Smart		Back
	Pause		Pause		Shift + Smart
	Stop		Stop		Options
	Theatre		TV/R		Red
	[+]		3D		Green
	Digital		Media		Yellow
	Analog		Shift + Media		Blue
	[...]		Subt		1
	Audio		Dual		2



 
 
 



 


 



 


 




 


 




 
 

 

 




 
 





 



 





 




 
 







	Original	Rechange		Original	Rechange
	Power		Power		1
	I<<		I<<		2
	>>I		>>I		3
	<<		<<		4
	Play		Play		5
	>>		>>		6
	Pause		Pause		7
	Stop		Stop		8
	[...]		Subt		9
	AD		Shift + Subt		0
	[i+]/[?]		Info		Prog+
	Up		Up		Prog-
	Right		Right		Recall
	Down		Down		Rec
	Left		Left		Top Menu
	OK		Ok		Menu
	Return/Back		Back		



 




 
 


 
 

 

 


 




 


 



 








 


 
 
 
 





 

 

 















Original	Rechange	Original	Rechange
 Power	 Power	 Return/Back	 Back
 I<<	 I<<	 Home	 Smart
 ←	 Ch -	 Options	 Options
 →	 Ch +	 Red	 Red
 >>I	 >>I	 Green	 Green
 >>>	 >>>	 Yellow	 Yellow
 Play	 Play	 Blue	 Blue
 >>>	 >>>	 1	 1
 Pause	 Pause	 2	 2
 Stop	 Stop	 3	 3
 AD	 Subt	 4	 4
 [i+]	 Info	 5	 5
 Up	 Up	 6	 6
 Right	 Right	 7	 7
 Down	 Down	 8	 8
 Left	 Left	 9	 9
 OK	 Ok	 0	 0





Original	Recharge	Original	Recharge
 Power	 Power	 Left	 Left
 I<<	 I<<	 OK	 Ok
 ←	 Ch -	 Return/Back	 Back
 →	 Ch +	 Home	 Smart
 >>I	 >>I	 1	 1
 <<	 <<	 2	 2
 Play	 Play	 3	 3
 >>	 >>	 4	 4
 Pause	 Pause	 5	 5
 Stop	 Stop	 6	 6
 [...]	 Subt	 7	 7
 AD	 Shift + Subt	 8	 8
 [i+]/[?]	 Info	 9	 9
 Source	 AV	 0	 0
 Up	 Up	 [≡]/Text	 Text
 Right	 Right	 Mute	 Mute
 Down	 Down	 Vol+	 Vol +



