
 
 

 







 

 
 
 
 

 
 
 
 


 
 
 




Original		Recharge		Original		Recharge	
	Power		Power		Exit/TV-G		Exit
	1		1		?		Smart
	2		2		@		Media
	3		3		Menu/i		Menu
	4		4		Back		Back
	5		5		Tools		Options
	6		6		Guide		Guide
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	FAV/ZAPP		Pre Ch		Left		Left
	TXT		Text		Vol+		Vol +
	Red		Red		Vol-		Vol -
	Green		Green		PR+		Ch +
	Yellow		Yellow		PR-		Ch -
	Blue		Blue		AV		AV





Original	Recharge	Original	Recharge
 Mute	 Mute		
 I<	 I<<		
 >I	 >>I		
 <<	 <<		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 3D/Search	 Format		
 ..O/Audio	 Dual		
 [...]..	 Subt		
 PIP/ECO	 3D		
 My Media/CEC	 TV/R		

