







 




Original	Recharge
 Source	 AV / Input / RDS
 Power Tv	 Power
 [+]	 Shift + OK
 3D	 Zoom / Size
 Theatre	 Shift + Smart / List
 <</<I	 << / Tune-
 Play	 Play / Slow
 >>/I>	 >> / Tune+
 Sync Menu	 Shift + D.Menu / Top Menu
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 ?/i-Manual	 Shift + Setup / OPT / Tools
 Scene	 Picture / Format
 BD/DVD Top	 Shift + Menu /
 BD/DVD Menu	 D.Menu / Top
 Digital/Analog	 Shift + Display / Media

Original	Recharge
 Exit	 Exit / Cancel / Clear
 Internet Widgets	 Display / Media
 Internet Video	 Smart / List
 ♥/FAV	 Fav / Marker / PC
 Guide	 Guide / EPG / -/-
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat






 






 



Original	Recharge
Blue	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
[=]/Text	Text / Goto
0	0
[...]	Subtitle / EQ
Vol+	Vol+
Prog+	CH+ / Page+
Mute	Mute / Dimmer
Audio	Audio / Lang I/II

Original	Recharge
Vol-	Vol-
Prog-	CH- / Page-





 

 









 









 

 

 

 





Original	Recharge
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Home	 Shift + Home / Menu /
 1	 1

Original	Recharge
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [...]	 Subtitle / EQ
 Prog+	 CH+ / Page+
 Audio	 Audio / Lang I/II
 Prog-	 CH- / Page-






Original	Recharge
 Power	 Power
 <</>l	 << / Tune-
 Play	 Play / Slow
 >>/l>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>l	 >>l / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /

Original	Recharge
 Home	 Shift + Menu /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ





Original	Recharge	Original	Recharge
 Audio	 Audio / Lang I/II		





Original	Recharge
 Source	 AV / Input / RDS
 Power	 Power
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Right	 Right
 [i+]/Info	 Info / Angle
 Up	 Up
 OK	 OK
 Left	 Left
 Return	 Back / Return
 Down	 Down

Original	Recharge
 Home	 Shift + Menu /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 [≡]/Text	 Text / Goto
 0	 0
 [...]	 Subtitle / EQ
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Vol-	 Vol-

