



Original	Rechange
Power	Power
Tv/AV	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide
Eject	Eject
Play/Pause	Play
Stop	Stop
Return	Back

Original	Rechange
Mute	Mute
Vol+	Vol +
Vol-	Vol -
Up	Up
CH+	Ch +
CH-	Ch -
Down	Down
Right	Right
Left	Left
Sys Menu	Menu
Display	Shift + Info
OK	Ok
Picture	Format
Sound	Dual
Timer	Shift + AV
Nicam/A2	Media
Lan/Prog-	Shift + Ch -





Original	Rechange	
PROG+ ZOOM	Zoom/Prog+	+ Shift + Ch +
SUB	Sub	Subt
GOTO	Goto	Options
TV/TXT DVB-MENU SET	SET/Tv/TXT/DVB-	Text
REVEAL-EXIT ANG	ANG/Reveal/Exit	Exit
CANCEL TV FORMAT MENU	Menu/Cancel/Tv Format	D. Menu
INFO TITLE	Title/info	Info
HOLD LANGUAGE <<	<</Hold/Languag	<<
SIZE TEXT >>	>>/Size/Text	>>
SUBPAGE FAV <<<	I<</Subpage	I<<
SUBPAGE FAV <<<	FAV	Pre Ch
INDEX EPG >>>	>>>/Index	>>>I
INDEX EPG >>>	EPG	Guide
TV/RADIO PRO	Red/Pro	Red
TV/RADIO PRO	Tv/Radio	TV/R
AUDIO SLOW	Green/Slow/Audio	Green
FREEZE REP	Yellow/Rep/Freeze	Yellow

Original	Rechange	
SUBTITLE A-B	Blue/A-B/Subtitle	Blue

