



 

 
 
 



 

 
 











 



 








 



 
 

 
 
 

 



 



 
 


 


 

 





 



 

 




 
 



 
 
 

 
 
 





Original		Rechange		Original		Rechange	
	Standby		Power		Zoom		Shift + Eject
	Open/Close		Eject		OO/Audio		Dual
	Input Select		AV		Search		TV/R
	1		1		Repeat		Text
	2		2		Top Menu		Menu
	3		3		Disc Menu		D. Menu
	4		4		Enter		Ok
	5		5		Up		Up
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Return		Back
	0		0		Display		Info
	Prog+		Ch +		Instant Skip		Guide
	Prog-		Ch -		1.3x/0.8x Play		Subt
	Clear		Exit		Time Slip		Sleep
	Mode		Format		Play		Play





Original	Rechange	Original	Rechange
 Stop	 Stop		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 >>	 >>		
 <<	 <<		
 Rec	 Rec		
 DVD	 Green		
 VCR	 Red		
 Dubbing	 Blue		
 Sat Link	 Media		
 Timer Set	 3D		
 Timer Prog.	 List		
 Rec Mode	 Shift + Rec		
 Setup	 Options		

