

 





 



 






 
 


 








 






 
 


 
 




 




 
 



 
 



 


 



 

 






Original		Rechange		Original		Rechange	
	Power		Power		C-		Ch -
	Mute		Mute		↑		>>
	1		1		↓		<<
	2		2		OK/OPC		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Salir		Exit
	8		8		Info		Info
	9		9		Audio		Dual
	0		0		"		Pause
	Menu		Menu		[≡]		Text
	Guia		Guide		←		Back
	Vol+		Vol +		Red		Red
	Vol-		Vol -		Green		Green
	C+		Ch +		Yellow		Yellow





Original	Recharge	Original	Recharge
 Blue/Aceptar	 Blue		
 FAV+	 Pre Ch		
 Radio/Tv	 TV/R		
 Ayuda	 Smart		

Original	Recharge	Original	Recharge

