




 





 











 


 


 
 
 


 



 



 
 
 


Original	Rechange
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Eco	 3D
 Guide	 Guide
 Menu	 Menu
 Exit	 Exit
 Up	 Up

Original	Rechange
 Down	 Down
 OK	 Ok
 Right	 Right
 Left	 Left
 Option	 Options
 Return	 Back
 Info	 Info
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Text	 Text
 Subtitle	 Subt
 List	 List
 TV	 TV/R
 O)/Lang	 Dual





Original	Recharge	Original	Recharge
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

