



Original	Recharge
 Power	 Power
 Input TV	 TV/Radio /
 Input Av	 AV / Input / RDS
 Guide	 Guide / EPG / -/-
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [+]/Aspect	 Picture / Format

Original	Recharge
 Link Vieta	 Smart / List
 Option	 Setup / OPT /
 Direct Tv Rec	 Shift + Rec / Rec Mode
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0/VCR	 0
 0/VCR	 Shift + 4 / Shift + 4
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+





Original	Recharge
Vol+	Vol+
CH-	CH- / Page-
Vol-	Vol-
[≡]/Text	Text / Goto
[≡♦]/STTL	Subtitle / EQ
[≡i]/Index	Display / Media
[≡+]/Hold	Shift + Stop /
Power DVD	Shift + Power
Rec DVD	Rec / Rec Mode
Programme Down	Shift + CH- /
Programme Up	Shift + CH+ /
<</I<< DVD	<< / Tune-
<</I<< DVD	I<< / Preset-
>>/>>I DVD	>>I / Preset+
>>/>>I DVD	>> / Tune+
Stop DVD	Stop / Hold
Pause/Step DVD	Pause / Step / Freeze

Original	Recharge
Play DVD	Play / Slow





Original	Recharge	Original	Recharge
Power DVD	Power		
Rec DVD	Rec / Rec Mode		
Programme Down	CH- / Page-		
Programme Up	CH+ / Page+		
I<< DVD	I<< / Preset-		
I<< DVD	<< / Tune-		
>>I DVD	>>I / Preset+		
>>I DVD	>> / Tune+		
Stop DVD	Stop / Hold		
Pause/Step DVD	Pause / Step / Freeze		
Play DVD	Play / Slow		





Original		Recharge		Original	Recharge
	Power VCR		Power		
	Rec VCR		Rec / Rec Mode		
	Programme Down		CH- / Page-		
	Programme Up		CH+ / Page+		
	<< / I << VCR		I << / Preset-		
	<< / I << VCR		<< / Tune-		
	>> / I >> VCR		>> / Tune+		
	>> / I >> VCR		>> I / Preset+		
	Stop VCR		Stop / Hold		
	Pause/Step VCR		Pause / Step / Freeze		
	Play VCR		Play / Slow		

