 

 

 


 




 




 






 



 

 
 


 
 
 








 




 
 



 








	Original	Recharge		Original	Recharge
	Power		Power		J/S.Mode
	[i+]		Info		P.Mode
	DTT/Tv		TV/R		Vol+
	Rec/AV1		Rec		Vol-
	Stop/AV2		Stop		I/II
	Play/AV3		Play		Mute
	AV4		AV		P+
	Pause/AV5		Pause		P-
	<</HDMI1/2		<<		1
	>>/RGB		>>		2
	Menu		Menu		3
	Back		Back		4
	Up		Up		5
	Down		Down		6
	Right		Right		7
	Left		Left		8
	OK		Ok		9
					Shift + Dual
					Shift + Format
					Vol +
					Vol -
					Dual
					Mute
					Ch +
					Ch -
					1
					2
					3
					4
					5
					6
					7
					8
					9






 

 






 
 

 
 
 





 
 





Original		Recharge		Original		Recharge	
	0		0				
	[> <]/2-4-12		3D				
	[≡]		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[≡i]		List				
	[≡X]		Smart				
	[...]/Slide Show		Subt				
	[≡?]/Rotate		Pre Ch				
	[≡]/Text		Text				
	Swivel		Sleep				
	[<>]		Format				
	Photo		Media				

 
 
 

 
 



 


 












 







 










	Original	Recharge	Original	Recharge
	Power			
	OK			
	Up			
	Down			
	Right			
	Left			
	Menu			
	Play/AV3			
	Stop/AV2			
	Pause/AV5			
	<</HDMI 1/2			
	>>/RGB			
	P+			
	P-			





Original		Recharge		Original		Recharge	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

