



| Original   | Rechange  |
|--|---|
|  Power    |  Power               |
|  Source   |  AV / Input / RDS    |
|  1        |  1                   |
|  2        |  2                   |
|  3        |  3                   |
|  4        |  4                   |
|  5        |  5                   |
|  6        |  6                   |
|  7        |  7                   |
|  8       |  8                  |
|  9      |  9                 |
|  TV     |  TV/Radio /        |
|  0      |  0                 |
|  Recall |  Fav / Marker / PC |
|  V+     |  Vol+              |
|  Mute   |  Mute / Dimmer     |
|  P+     |  CH+ / Page+       |

| Original   | Rechange  |
|--|---|
|  V-             |  Vol-                    |
|  World/Internet |  Smart / List            |
|  P-             |  CH- / Page-             |
|  Menu           |  Menu / Home             |
|  Q.Menu         |  D.Menu / Top            |
|  Up             |  Up                      |
|  Left           |  Left                    |
|  OK             |  OK                      |
|  Right          |  Right                   |
|  Down          |  Down                   |
|  Back         |  Back / Return         |
|  Exit         |  Exit / Cancel / Clear |
|  i            |  Info / Angle          |
|  Music/Camera |  Display / Media       |
|  TV Guide     |  Guide / EPG / -/-     |
|  */O          |  Shift + 1             |
|  */Q          |  Shift + 2             |





| Original  |          | Recharge  |                             | Original |  | Recharge |  |
|---|----------|---|-----------------------------|----------|--|----------|--|
|    | [≡]/Text |    | Text / Goto                 |          |  |          |  |
|    | Red      |    | Red / Netflix / Search      |          |  |          |  |
|    | Green    |    | Green / APP / Repeat        |          |  |          |  |
|    | Yellow   |    | Yellow / YouTube / Repeat   |          |  |          |  |
|    | Blue     |    | Blue / Prime Video / Random |          |  |          |  |
|    | Lang     |    | Audio / Lang I/II           |          |  |          |  |
|    | [≡]..    |    | Sound / Title               |          |  |          |  |
|    | [-O-]    |    | Setup / OPT /               |          |  |          |  |
|    | <<       |    | << / Tune-                  |          |  |          |  |
|    | Pause    |    | Pause / Step / Freeze       |          |  |          |  |
|   | >>       |   | >> / Tune+                  |          |  |          |  |
|  | Rec      |  | Rec / Rec Mode              |          |  |          |  |
|  | Play     |  | Play / Slow                 |          |  |          |  |
|  | Stop     |  | Stop / Hold                 |          |  |          |  |
|   |          |   |                             |          |  |          |  |
|   |          |   |                             |          |  |          |  |
|   |          |   |                             |          |  |          |  |

