 
 




Original		Rechange		Original		Rechange	
	Standby		Power		Aspect		Format
	Eject / Auto		Eject		Audio		Dual
	Mute		Mute		Display		Info
	1		1		Ch +		Ch +
	2		2		Ch -		Ch -
	3		3		Up		Up
	4		4		Right		Right
	5		5		Down		Down
	6		6		Left		Left
	7		7		Enter		Ok
	8		8		Menu		Menu
	9		9		DVD Setup / Exit		Exit
	0		0		DVD Setup		Options
	-/--		Shift + Guide		Input		AV
	Recall		Back		P.Mode		Shift + Format
	Vol+		Vol +		S.Mode		Shift + Dual
	Vol-		Vol -		Sleep		Sleep



