



	Original	Rechange		Original	Rechange
	Power		Power		P+
	Tv/R		TV/R		P-
	Input		AV		Vol+
	Mute		Mute		Vol-
	1		1		Up
	2		2		Down
	3		3		Right
	4		4		Left
	5		5		Ok
	6		6		i
	7		7		Audio
	8		8		Sub
	9		9		Guide
	0		0		TXT
	-/--		Shift + Guide		Back
	Exit		Exit		Pause
	Menu		Menu		F1
					List





Original	Recharge	Original	Recharge
	Power		Power
	TV/R		TV/R
	Source		AV
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Shift + Guide
	Menu		Menu
	Exit		Exit
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	i		Info
	Audio		Dual
	Sub		Subt
	Guide		Guide
	TXT		Text
	↔		Back
	Pause		Pause
	F1		Options



