



Original		Rechange		Original		Rechange	
	Power		Power		Red		Red / Netflix / Search
	DVB Menu		D.Menu / Top		Tv/Radio		TV/Radio /
	Open/Close		Eject / Surround		>>		>> / Tune+
	Prog+		CH+ / Page+		Green/Audio		Green / APP / Repeat
	Prog-		CH- / Page-		I<<		I<< / Preset-
	Exit		Exit / Cancel / Clear		Yellow/Freeze		Yellow / YouTube / Repeat
	Play		Play / Slow		>>I		>>I / Preset+
	Pause		Pause / Step / Freeze		Blue/Subtitle		Blue / Prime Video / Random
	TV/TXT/Tv Format		Shift + Text /		CH+		Shift + CH+ /
	Cancel/Text		Shift + Exit / Cancel / Clear		Tv-Menu		Shift + Menu /
	Reveal/Info		Shift + Info / Angle		Vol+		Vol+
	Stop		Stop / Hold		CH-		Shift + CH- /
	Hold/Language		Shift + Stop /		Tv/AV		AV / Input / RDS
	Size/FAV		Shift + Zoom /		Vol-		Vol-
	Subpage/EPG		Shift + Guide / EPG / -/-		+5V		Shift + 5
	Index		Setup / OPT /		Sleep		Sleep / Timer
	<<		<< / Tune-		Up		Up





Original	Rechange
	 Left
	 OK
	 Right
	 Down
	 Mute / Dimmer
	 Display / Media
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0

Original	Rechange
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Shift + Picture / Format
	 Audio / Lang I/II
	 Zoom / Size
	 Shift + 2
	 Menu / Home
	 Subtitle / EQ
	 Shift + TV/Radio / Program
	 Info / Angle
	 Shift + Sound / Title
	 Text / Goto
	 Shift + Play /
	 Shift + Back / Return
	 Shift + Yellow / YouTube /

