







 




 

 

 

 



 
 



 

 





 
 
 




 
 
 
 

 




 


 



 



 
 
 




 







 






Original		Rechange		Original		Rechange	
	Power		Power		PR+		Ch +
	Source		AV		PR-		Ch -
	HDMI		3D		Mute		Mute
	1		1		CH.List		List
	2		2		Media.P		Media
	3		3		Menu		Menu
	4		4		Guide		Guide
	5		5		Tools		Options
	6		6		Info		Info
	7		7		Return		Back
	8		8		Exit		Exit
	9		9		OK		Ok
	0		0		Up		Up
	TTX/MIX		Text		Down		Down
	PRE-CH		Pre Ch		Right		Right
	Vol+		Vol +		Left		Left
	Vol-		Vol -		Red/A		Red





Original		Rechange		Original	Rechange
	Green/B		Green		
	Yellow/C		Yellow		
	Blue/D		Blue		
	Internet/@Tv		Smart		
	S.Mode	 + 	Shift + Dual		
	Alarm		Sleep		
	Dual/I-II		Dual		
	P.Size		Format		
	Subt.		Subt		
	<<		<<		
	>>		>>		
	Pause		Pause		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

