





 





 
















 











 

 

 

 



Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Smart / List
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Rechange
 P+	 CH+ / Page+
 P+	 Up
 -	 Left
 -	 Vol-
 OK	 OK
 +	 Right
 +	 Vol+
 TXT	 Text / Goto
 P-	 CH- / Page-
 P-	 Down
 AV	 AV / Input / RDS
 Scan/[]	 Setup / OPT /
 PAP/PAUSE	 Display / Media
 SIZE/STOP	 Zoom / Size
 POS/PLAY	 D.Menu / Top
 Red/ <	 Red / NetfliX / Search
 Green/>	 Green / APP / Repeat





Original	Rechange
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Menu / Home
	 CH+ / Page+

Original	Rechange
	 Up
	 Left
	 Vol-
	 OK
	 Right
	 Vol+
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-





























 






Original	Recharge
Blue/>>	>> / Tune+

Original	Recharge









Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 PIP	 Smart / List
 4	 4
 5	 5
 6	 6
 [<>]	 Picture / Format
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z	 Menu / Home

Original	Rechange
 P+	 CH+ / Page+
 P+	 Up
 -	 Left
 -	 Vol-
 OK	 OK
 +	 Vol+
 +	 Right
 TXT	 Text / Goto
 P-	 CH- / Page-
 P-	 Down
 AV	 AV / Input / RDS
 Scan/[]	 Setup / OPT /
 PAP/Pause	 Pause / Step / Freeze
 Size/Stop	 Stop / Hold
 Pos/Play	 Play / Slow
 Red/I<	 I<< / Preset-
 Green/>I	 >>I / Preset+


































 
 













 







Original	Recharge	Original	Recharge
 Yellow/<<	 << / Tune-		
 Blue/>>>	 >> / Tune+		







Original	Rechange
	 Power
	 1
	 2
	 3
	 Smart / List
	 4
	 5
	 6
	 Picture / Format
	 7
	 8
	 9
	 Guide / EPG / -/--
	 0
	 Info / Angle
	 Menu / Home
	 CH+ / Page+

Original	Rechange
	 Up
	 Vol-
	 Left
	 OK
	 Vol+
	 Right
	 Text / Goto
	 CH- / Page-
	 Down
	 AV / Input / RDS
	 Setup / OPT /
	 Pause / Step / Freeze
	 Stop / Hold
	 Play / Slow
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-





Original	Rechange
 Blue/>>	 >> / Tune+

Original	Rechange

