








 
 
 





 






 
 
 

 


 






Original	Recharge
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 ([ / ])	 Zoom / Size
 *	 D.Menu / Top
 [ <> ]	 Picture / Format
 TV GUIDE	 Guide / EPG / -/-
 SEARCH	 SHIFT + Red / Netflix /
 SOURCES	 RDS AV INPUT AV / Input / RDS
 SMART TV	 LIST SMART Smart / List
 HOME	 HOME MENU Menu / Home
 TV EXIT	 CLEAR EXIT Exit / Cancel / Clear
 RED	 NETFLIX SEARCH Red / Netflix / Search

Original	Recharge
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 i+/Info	 Info / Angle
 OPTIONS	 OPT-TOOLS SETUP Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 BACK	 RETURN BACK Back / Return
 Down	 Down
 MULTIVIEW	 MEDIA DISPLAY Display / Media
 Vol+	 Vol+
 LIST	 SHIFT + LIST SMART Shift + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 MUTE	 DIMMER MUTE Mute / Dimmer



