



Original		Rechange		Original		Rechange	
	Info		Info / Angle		0		0
	Power		Power		Blue/Video		Shift + 4
	TV		TV/Radio /		Blue/Video		Blue / Prime Video / Random
	AV		AV / Input / RDS		Yellow/Sound		Sound / Title
	R		Shift + TV/Radio / Program		Yellow/Sound		Yellow / YouTube / Repeat
	F1		Shift + 1		PR+		CH+ / Page+
	F2		Shift + 2		Up		Up
	F3		Shift + 3		White		Fav / Marker / PC
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Green/Timer		Sleep / Timer
	5		5		Green/Timer		Green / APP / Repeat
	6		6		PR-		CH- / Page-
	7		7		Down		Down
	8		8		Red/Recall		Back / Return
	9		9		Red/Recall		Red / Netflix / Search





Original		Recharge		Original		Recharge	
	Vol+		Vol+				
	Vol-		Vol-				
	Mute		Mute / Dimmer				
	Pause		Pause / Step / Freeze				
	Exit		Exit / Cancel / Clear				
	Text		Text / Goto				
	EPG		Guide / EPG / -/--				
	Menu		Menu / Home				

