













 

 

 

 

 



 

 

 

 

 













 





Original	Recharge
 Power	 Power
 Tv/Radio	 TV/Radio /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold	 Shift + Stop /
 TVG	 Guide / EPG / -/--
 Subtitle	 Subtitle / EQ
 Size	 Zoom / Size
 Aspect	 Shift + Picture / Format
 Media	 Smart / List
 Subpage	 Eject / Surround
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Recharge
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 Sleep	 Sleep / Timer
 >>I/Index	 >>I / Preset+
 Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-





Original		Rechange		Original		Rechange	
	Mute		Mute / Dimmer		P.Mode		Picture / Format
	Display		Display / Media		S.Mode		Sound / Title
	CH+		CH+ / Page+				
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	-/--		Shift + Guide / EPG / -/--				
	Recall		Back / Return				
	Source		AV / Input / RDS				

