

 


 

 
 
 
 
 
 

 

 
 






 







 
 
 
 
 





 


 
 
 



 







 




 







Original	Recharge	Original	Recharge
 Power	 Power	 Q.View	 Smart
 Tv/Radio	 TV/R	 FAV	 Pre Ch
 Subtitle	 Subt	 Guide	 Guide
 AD/PIP/*	 Shift + Subt	 Mute	 Mute
 TV/PC	 Media	 Vol+	 Vol +
 Input	 AV	 Vol-	 Vol -
 1	 1	 PR+	 Ch +
 2	 2	 PR-	 Ch -
 3	 3	 Text	 Text
 4	 4	 Info	 Info
 5	 5	 T.Opt	 Shift + Options
 6	 6	 Settings	 Options
 7	 7	 Q.Menu	 Menu
 8	 8	 Back	 Back
 9	 9	 Exit	 Exit
 0	 0	 Up	 Up
 List	 List	 Down	 Down





Original	Recharge	Original	Recharge
 Right	 Right		
 Left	 Left		
 OK	 Ok		
 Simplink	 D. Menu		
 Rec/*	 Rec		
 Stop	 Stop		
 <<	 <<		
 Play	 Play		
 Pause	 Pause		
 >>	 >>		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

