




 






 

 


 


 





Original	Recharge
 Power	 Power
 Guide	 Guide / EPG / -/--
 Tv Input	 AV / Input / RDS
 AV Input	 Shift + AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 [≡♦]/STTL	 Subtitle / EQ
 [+]/Aspect	 Picture / Format
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 APPS	 Smart / List
 Left	 Left
 Up	 Up
 Right	 Right
 Home	 Shift + Menu /
 OK	 OK

Original	Recharge
 Option	 Setup / OPT /
 Down	 Down
 Back/Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Recharge		Original		Recharge	
	6		6				
	7		7				
	8		8				
	9		9				
	?/Help		D.Menu / Top				
	0		0				
	Last View		Fav / Marker / PC				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	I<<		I<< / Preset-				
	Pause		Pause / Step / Freeze				
	>>I		>>I / Preset+				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				

