



Original	Rechange	Original	Rechange
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Display	 Display / Media
 8	 8	 Vol+	 Vol+
 9	 9	 MTS	 Smart / List
 DTV/ATV	 Shift + TV/Radio / Program	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Recall	 Back / Return	 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format	 CH-	 CH- / Page-
 S.Mode	 Sound / Title	 FAV/List	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 Media	 Shift + Display / Media





Original	Recharge
Freeze	Pause / Step / Freeze
Guide	Guide / EPG / -/-
<<	<< / Tune-
>>	>> / Tune+
I<</Cancel	I<< / Preset-
>>I/Sub.Pg	>>I / Preset+
Stop/Index	Stop / Hold
Play/Pause/Timeshift	Play / Slow
Tv/Radio	TV/Radio /
Subtitle	Subtitle / EQ
Reveal	Shift + Back / Return
Size	Zoom / Size
Hold	Shift + Stop /
Text	Text / Goto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat

Original	Recharge
Cyan	Blue / Prime Video / Random

