







 
 





 
 



 
 



 

 
 

 

 

 

 



 



 
 


 



 
 


 
 
 



 
 



 

 






Original		Rechange		Original		Rechange	
	Power		Power		Format		V-FOR
	Source		SRC		Prog +		CH +
	1		1		Prog -		CH -
	2		2		Red		Red (A)
	3		3		Green		Green (B)
	4		4		Yellow		Yellow (C)
	5		5		Blue		Blue (D)
	6		6		Menu		MENU
	7		7		Media		MEDIA
	8		8		Up		UP
	9		9		Down		DOWN
	0		0		Right		RIGHT
	Guide		-/-- / EPG		Left		LEFT
	Infos		INFO		OK		OK
	Mute		MUTE		Back		BACK
	Vol +		VOL +		Exit		EXIT
	Vol -		VOL -		AD		Audio





Original	Recharge	Original	Recharge
 Subtitle	 Subt.		
 Text	 TEXT		
 Radio	 TV/R		
 I<<	 First		
 <<	 Rewind		
 >>	 Fast Forward		
 >>I	 Last		
 Rec	 Rec		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		

