

 




 



 


 







 
 
 
 
 

 
 
 





 

 






	Original	Rechange		Original	Rechange
STEP	Step		Power	ANGLE	Angle
SEARCH	Search		TV/R	AUDIO	Audio
MUTE	Mute		Mute	MENU/PBC	Menu PBC
SOURCE	Source		AV	TITLE	Title
1	1		1		Up
2	2		2	SETUP	Setup
3	3		3		Down
4	4		4		Right
5	5		5		Left
6	6		6	ENTER	Enter
7	7		7	VOL+	Vol+
8	8		8	VOL-	Vol-
9	9		9	MODE	Mode
0	0		0		Stop
10+	10+		Guide		Play
DISPLAY	Display		Info		Pause
SUBTITLE	Subtitle		Subt		>>
					Red
					Dual
					Menu
					List
					Options
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
					Exit
					Stop
					Play
					Pause
					>>





Original	Rechange
I<<	I<<
>>	>>
<<	<<
REPEAT	REPEAT TEXT
Repeat	Text
(SLOW)	ECO 3D
Slow	3D
PROGRAM	PROG SLEEP
Program	Sleep
ZOOM	ZOOM
Zoom	Eject

Original	Rechange

