





 


 
 
 



 







 



 






 
 
 



 

 
 

 





 

 




 
 

 



 




Original		Recharge		Original		Recharge	
	Power		Power		Mute		Mute
	Internet		Smart		P+		Ch +
	Tv/Radio		TV/R		P-		Ch -
	1		1		Recall		Pre Ch
	2		2		Menu		Menu
	3		3		Music/Video/Photo		Media
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	i		Info		FAV		Shift + Pre Ch
	EPG		Guide		LIB		Format
	Vol+		Vol +		OPT		Options
	Vol-		Vol -		Text		Text





Original		Rechange		Original		Rechange	
	Subt.		Subt				
	Audio		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

