 

 
 

 

 


 
 





 















 

 





 





 

 


 
 

 


 
 







 




Original		Rechange		Original		Rechange	
	Power		Power		S.Mode		Dual
	Tv/AV		AV		Call		Back
	1		1		P.Mode		3D
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		CH+		Ch +
	7		7		CH-		Ch -
	8		8		Vol+		Vol +
	9		9		Vol-		Vol -
	0		0		Menu		Menu
	-/--		Guide		TXT/TV		Text
	System		Media		Mix		Subt
	Mute		Mute		Sub/Nicam		Smart
	Sleep		Sleep		Hold		Options
	Recall		Pre Ch		Reveal		TV/R





Original		Rechange		Original		Rechange	
	Index		Info				
	Size		Format				
	Cancel		Exit				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Cyan		Blue				

