

 



















 

 

 








 

 

 










Original	Rechange
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 << / Slow/Tunin	 << / Tune-
 Tuning+/Slow	 >> / Tune+
 I<</Preset-	 I<< / Preset-
 >>I/Preset+	 >>I / Preset+
 Bass Level	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Band	 Picture / Format
 Sleep	 Sleep / Timer
 Tv/Video	 TV/Radio /
 DVD Menu	 D.Menu / Top

Original	Rechange
 DVD Setup	 Setup / OPT /
 Name	 Text / Goto
 AMP Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Clear	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Vol+	 Vol+
 Memory	 Smart / List
 Vol-	 Vol-
 Display	 Display / Media
 1	 1
 2	 2





Original	Recharge	Original	Recharge
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	>10		Guide / EPG / -/--
	0		0
	Repeat		Green / APP / Repeat
	Play Mode		Shift + Play /
	Stereo/Mono		Shift + Audio / Lang I/II
	Function		Shift + Setup / OPT / Tools
	DVD Top Menu		Shift + Menu /
	Sound Field+		Shift + Vol+
	Night Mode		Shift + Smart / List
	Sound Field-		Shift + Vol-

Original	Recharge	Original	Recharge
	Enter1		Shift + 1
	DVD Display		Shift + 2





Original	Recharge	Original	Recharge
Power Tv	Power		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0/10	0		
>10	Guide / EPG / >10		
Enter	OK		
Tv Vol+	Vol+		
Tv CH+	CH+ / Page+		
Tv Vol-	Vol-		
Tv CH-	CH- / Page-		

Original	Recharge

