



Original	Recharge
 On/Standby	 Power
 Memory	 Menu
 Clear/Dimmer	 Exit
 Select Disc 1	 Shift + 1
 Select Disc 2	 Shift + 2
 Select Disc 3	 Shift + 3
 Select Disc 4	 Shift + 4
 Select Disc 5	 Shift + 5
 Random CD	 Media
 Pause CD	 Pause
 Stop CD	 Stop
 Play CD	 Play
 CD	 Yellow
 Tuner (Band)	 Green
 Video/AUX/USB	 Red
 Pause USB	 Shift + Pause
 Play USB	 Shift + Play

Original	Recharge
 Stop USB	 Shift + Stop
 Tuning/Cursor Up	 Up
 Tuning/Cursor	 Down
 Tuning/Cursor Right/Preset	 Right
 Tuning/Cursor Left/Preset	 Left
 Display	 Info
 Folder	 Smart
 Clock/Timer	 AV
 RDS ASPM	 TV/R
 RDS PTY	 Format
 RDS Display	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Recharge	Original	Recharge
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 +10	 GUIDE		
 Equalizer Mode	 Dual		
 X.Bass/Demo	 Subt		
 Vol+	 Vol +		
 Vol-	 Vol -		

