








 





 
 
 

 
 
 
 

 

 


 
 
 





Original		Rechange		Original		Rechange	
	Power		Power		Exit		Exit
	TV/AV		AV		Vol+		Vol +
	TV/TXT		Text		Vol-		Vol -
	Cancel		Media		Channel List		List
	Reveal		D. Menu		Mute		Mute
	DTV		Smart		EPG		Guide
	Hold		Options		Info		Info
	Size		Format		Up		Up
	Subpage		Shift + Subt		Down		Down
	Index		Shift + Info		Right		Right
	Red		Red		Left		Left
	Green		Green		OK		Ok
	Yellow		Yellow		1		1
	Blue		Blue		2		2
	CH+		Ch +		3		3
	CH-		Ch -		4		4
	Menu		Menu		5		5





Original		Rechange		Original		Rechange	
	6		6		>>I		>>I
	7		7		Play		Play
	8		8		Pause		Pause
	9		9		Aspect		3D
	0		0				
	FAV		Pre Ch				
	Picture	 + 	Shift + Format				
	Recall		Back				
	Sound		Dual				
	Sleep		Sleep				
	Nicam/A2		Eject				
	Subtitle		Subt				
	Tv/Radio		TV/R				
	<<		<<				
	>>		>>				
	Repeat	 + 	Shift + Text				
	I<<		I<<				

