

 








 

 



 









 

 



















 



 









 

 
 





Original		Rechange		Original		Rechange	
	Standby		Power		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	EPG		Guide		Favorite		Pre Ch
	Audio		Dual		Tv/Radio		TV/R
	Info		Info		1		1
	DTV/VCR		Smart		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	CH+		Ch +		7		7
	CH-		Ch -		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		Goto		Options
	Left		Left		Recall		Back
	OK		Ok		<<		<<



