


 





Original		Rechange		Original		Rechange	
	Power		Power		Info		Info
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Text		Text
	3		3		EPG		Guide
	4		4		Up/CH+		Up
	5		5		Down/CH-		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		Enter		Ok
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	FAV		Pre Ch		Stop		Stop
	Recall		Back		Play		Play
	Lang		Dual		Rec		Rec
	Tv/Radio		TV/R		Pause		Pause
	Dev.List		List		<<		<<





	Original	Rechange	Original	Rechange
	>>		>>	
	I<<		I<<	
	>>I		>>I	
	Page Up		Ch +	
	Page Down		Ch -	
	HDMI		Media	
	Zoom		Eject	
	Subtitle		Subt	
	Filelist		Options	
	Goto		3D	
	Repeat		Shift + Text	
	Timeshift		AV	
	Auto		Format	
	Red		Red	
	Green		Green	
	Yellow		Yellow	
	Blue		Blue	

