






 







 




 


 





 


 




 







 



 





 








 
 






Original		Rechange		Original		Rechange	
	Standby		Power		TV / Radio		TV/R
	Mute		Mute		Menu		Menu
	1		1		Exit		Exit
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Record		Rec
	8		8		Stop		Stop
	9		9		Vol +		Vol +
	0		0		Vol -		Vol -
	Info		Info		TTX		Text
	Recall		Back		FAV		Pre Ch
	EPG		Guide		CH +		Ch +
	Audio		Dual		CH -		Ch -
	Subtitle		Subt		Media		Media





	Original	Rechange	Original	Rechange
	I<< Prev	I<<		
	Play	Play		
	<< Rew	<<		
	USB	Smart		
	>>I Next	>>I		
	Pause	Pause		
	>> Fwd	>>		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		

