
 







 
 

 


 
 




 
 




 


 



 

 
 

 
 

 



 

 






	Original	Rechange		Original	Rechange
	Power		Power		0/Mark
	Hi-Lite		Smart		Disc Set
	Previous		Pre Ch		Track Set
	Best		Media		Time Chara
	Repeat		Text		Title Display
	Mode		3D		Title Input
	PGM		Options		Cursor >
	Clear		Exit		< Cursor
	1		1		Disc+
	2		2		Disc-
	3		3		<<
	4		4		>>
	5		5		I<<
	6		6		>>I
	7		7		Stop
	8		8		Pause
	9		9		Play



