


 


 





 

 

 
 





















 





Original		Rechange		Original		Rechange	
	On / ST.BY		Power		Info		Info
	TV / Radio		TV/R		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Right		Right
	2		2		Down		Down
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Vol +		Vol +
	6		6		Vol -		Vol -
	7		7		Prog +		Ch +
	8		8		Prog -		Ch -
	9		9		Red		Red
	0		0		Green		Green
	Text		Text		Yellow		Yellow
	FAV		Pre Ch		Blue		Blue
	Back		Back		Menu		Menu
	EPG		Guide		Audio		Dual





Original	Recharge	Original	Recharge
 Sleep	 Sleep		
 Sub	 Subt		
 << Rew	 <<		
 Fwd >>	 >>		
 I<< Prev	 I<<		
 Next >>I	 >>I		
 Rec	 Rec		
 File	 Smart		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 Stop	 Stop		

