



 

 

 



 



 

 











 





 





 

 

 

 



 

 

 

 













Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/-		Red / <<		<< / Tune-







 

 

 

 

 

 

 
 
 

 

 



 

 

 



 





 



 



 

 



 

 

 

 
 








Original	Recharge	Original	Recharge
Green / >>	>> / Tune+		
Green / >>	Green / APP / Repeat		
Yellow / <<	<< / Preset-		
Yellow / <<	Yellow / YouTube / Repeat		
Blue / >>	Blue / Prime Video / Random		
Blue / >>	>> / Preset+		
Text / Play/Pause	Text / Goto		
Text / Play/Pause	Pause / Step / Freeze		
Text / Play/Pause	Play / Slow		
Stop / Still	Stop / Hold		
Timer / Subtitle	Subtitle / EQ		
Size / Aspect	Zoom / Size		
Cancel [≡X]	Shift + Exit / Cancel / Clear		
Radio	TV/Radio /		
Audio / I/II	Audio / Lang I/II		
Rec	Rec / Rec Mode		





Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Recharge
Green	Green / APP / Repeat
>>	>> / Tune+
Yellow	Yellow / YouTube / Repeat
I<<	I<< / Preset-
Blue	Blue / Prime Video / Random
>>I	>>I / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze
[=]	Text / Goto
Stop/Still	Stop / Hold
[=+]	Picture / Format
[=o]/Subtitle	Subtitle / EQ
[=♦]/[+]	Zoom / Size
[=x]	Setup / OPT /
Radio	TV/Radio /
Audio	Audio / Lang I/II
Rec	Rec / Rec Mode

Original	Recharge

