

 

 




 









 








 






 

 

 
 





















Original	Rechange	Original	Rechange
 Power	 Power	 DVD / CD	 Media
 Mute	 Mute	 Vol +	 Vol +
 Menu	 Menu	 Vol -	 Vol -
 1 / Disc 1	 1	 >>	 >>
 2 / Disc 2	 2	  <<	  <<
 3 / Disc 3	 3	 Up	 Up
 4 / Disc 4	 4	 Right	 Right
 5 / Disc 5	 5	 Down	 Down
 6	 6	 Left	 Left
 7 / Angle	 7	 OK / Save	 Ok
 8	 8	 Return	 Back
 9 / Night DVD	 9	 Sleep	 Sleep
 0 / --	 0	 Play Mode	 Shift + Play
 Aux 1 / SAT /	 AV	 Pause	 Pause
 Aux 2 / VCR	 Shift + AV	 Stop	 Stop
 Tuner	 Shift + TV/R	 Rec / Zoom	 Rec
 TV	 TV/R	 << REV	 <<



