














 
 
 


 
 


 

 

 



 





	Original	Rechange
	Power	 Power
	Mute	 Mute
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	10+	 Shift + Guide
	SUBTL	 Subt
	EPG	 Guide
	Menu	 Menu
	Vol +	 Vol +

	Original	Rechange
	Vol -	 Vol -
	CH +	 Ch +
	CH -	 Ch -
	Exit	 Exit
	Red / USB Left	 Red
	Red / USB Left	 Shift + Left
	Green / USB	 Green
	Green / USB	 Shift + Down
	Yellow / USB Up	 Yellow
	Yellow / USB Up	 Shift + Up
	Blue / USB Right	 Blue
	Blue / USB Right	 Shift + Right
	Up	 Up
	Left	 Left
	Enter	 Ok
	Right	 Right
	Down	 Down





 

 
 


 
 
 
 
 

 
 
 


Original	Recharge	Original	Recharge
PREV QV	SETTINGS OPT Options	SIZE Size	PICTURE FORMAT Format
NEXT FAV	FAV PRE-CH Pre Ch	ESC PROG MIX Prog / Mix	HOME SMART Smart
SOURCE Source	TIMER AV AV	ESC PROG MIX Prog / Mix	SHIFT + PROG SLEEP Shift + Sleep
SLEEP Sleep	PROG SLEEP Sleep	RETURN SUBPG Return / SUBPG	RETURN BACK Back
PICTURE Picture	SHIFT + PICTURE FORMAT Shift + Format	RETURN REPEAT REVEAL Repeat / Reveal	SHIFT + RETURN BACK Shift + Back
SOUND Sound	SHIFT + SOUND DUAL Shift + Dual	SEARCH HOLD Search / Hold	SEARCH TV/R TV/R
DISPLAY Display	DISPLAY INFO Info		
TOP I/II / Top	SOUND DUAL Dual		
REV FAV- FAV - / REV	<<		
FWD FAV+ FAV + / FWD	>>		
TEXT USR/CR / Text	APP MEDIA Media		
TEXT USR/CR / Text	REPEAT TEXT Text		
INDEX Play/Pause / Index	PLAY MODE Play		
INDEX Play/Pause / Index	SHIFT + DISPLAY INFO Shift + Info		
INDEX Play/Pause / Index	Pause		
CANCEL Stop / Cancel	Stop		
CANCEL Stop / Cancel	SHIFT + CLEAR EXIT Shift + Exit		

Original	Recharge	Original	Recharge
SIZE Size	PICTURE FORMAT Format	SIZE Size	PICTURE FORMAT Format
ESC PROG MIX Prog / Mix	HOME SMART Smart	ESC PROG MIX Prog / Mix	HOME SMART Smart
ESC PROG MIX Prog / Mix	SHIFT + PROG SLEEP Shift + Sleep	ESC PROG MIX Prog / Mix	SHIFT + PROG SLEEP Shift + Sleep
RETURN SUBPG Return / SUBPG	RETURN BACK Back	RETURN SUBPG Return / SUBPG	RETURN BACK Back
RETURN REPEAT REVEAL Repeat / Reveal	SHIFT + RETURN BACK Shift + Back	RETURN REPEAT REVEAL Repeat / Reveal	SHIFT + RETURN BACK Shift + Back
SEARCH HOLD Search / Hold	SEARCH TV/R TV/R	SEARCH HOLD Search / Hold	SEARCH TV/R TV/R





Original	Recharge	
		Power
		AV
		Exit
		Menu
		Dual
		Media
		Options
		Text
		TV/R
		1
		2
		3
		6
		5
		4
		7
		8

Original	Recharge	
		9
		0
		Guide
		Up
		Right
		Ok
		Left
		Down
		Subt
		Pause
		Rec
		<<
		Play
		>>
		Shift + Media
		Shift + Dual
		Shift + 6

