










Original		Rechange		Original		Rechange	
	Power		Power		CH +		CH+ / Page+
	Mute		Mute / Dimmer		Vol -		Vol-
	1		1		Input		AV / Input / RDS
	2		2		CH -		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Menu		Menu / Home
	8		8		Down		Down
	9		9		Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--		Display		Display / Media
	0		0		PMode		Picture / Format
	Recall		Back / Return		S.Mode		Sound / Title
	Vol +		Vol+		Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format		FAV		Fav / Marker / PC
	Nicam		Audio / Lang I/II		FAV -		Shift + Down





Original	Recharge
FAV+ FAV +	SHIFT + Shift + Up
EPG EPG	Guide / EPG / -/--
TEXT Text	Text / Goto
HOLD Hold	SHIFT + Shift + Stop /
LANG Lang	SHIFT + Shift + Audio / Lang I/II
SUBTITLE Subtitle	Subtitle / EQ
INDEX / <<<	<<< / Tune-
INDEX / <<<	Info / Angle
SIZE / >>>	>>> / Tune+
SIZE / >>>	Zoom / Size
REVEAL / I<<<	I<<< / Preset-
SUBPAGE / >>>I	>>>I / Preset+
SUBPAGE / >>>I	Eject / Surround
Rec	Rec / Rec Mode
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze
Stop	Stop / Hold

Original	Recharge
MEDIA Media	SHIFT + Shift + Display / Media
TV/RADIO Red / TV/Radio	TV/Radio /
TV/RADIO Red / TV/Radio	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

