



| | Original | Recharge | | Original | Recharge |
|---|-----------|---|--------------|---|----------|
|  | Power |  | Power |  | 8 |
|  | Mute |  | Mute |  | 9 |
|  | Info |  | Info |  | 0 |
|  | Dual I/II |  | Dual |  | AVC |
|  | TV |  | TV/R |  | Vol + |
|  | Sleep |  | Sleep |  | Vol - |
|  | Sound |  | Shift + Dual |  | Prog + |
|  | Picture |  | Format |  | Prog - |
|  | Freeze |  | Pause |  | Up |
|  | Wide |  | Eject |  | Left |
|  | 1 |  | 1 |  | Enter |
|  | 2 |  | 2 |  | Right |
|  | 3 |  | 3 |  | Down |
|  | 4 |  | 4 |  | Input |
|  | 5 |  | 5 |  | Menu |
|  | 6 |  | 6 |  | Hold |
|  | 7 |  | 7 |  | Recall |



