



Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0	 0
 AV	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Rechange
 Blue	 Blue / Prime Video / Random
 TV/DTV	 TV/Radio /
 P +	 CH+ / Page+
 Menu	 Menu / Home
 Up	 Up
 Vol -	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol +	 Vol+
 Down	 Down
 Text / Top Menu	 Text / Goto
 Text / Top Menu	 D.Menu / Top
 P -	 CH- / Page-
 Back	 Back / Return
 Up / Hold	 Smart / List
 Up / Hold	 Shift + Stop / Hold





Original	Rechange	Original	Rechange
 Up / Hold	 >>I / Preset+		
 << / F.T/L	 << / Tune-		
 Play / ?	 Play / Slow		
 >> / Guide / Size	 >> / Tune+		
 >> / Guide / Size	 Guide / EPG / -/--		
 Down / Timer	 I<< / Preset-		
 Down / Timer	 Display / Media		
 Rec / ◇	 Rec / Rec Mode		
 Stop / Cancel	 Stop / Hold		
 Stop / Cancel	 Exit / Cancel / Clear		
 Pause / Subtitle / [≡i]	 Pause / Step / Freeze		
 Pause / Subtitle / [≡i]	 Subtitle / EQ		
 Zoom	 Zoom / Size		
 Audio / Guide	 Audio / Lang I/II		
 I / II	 Shift + Audio / Lang I/II		
 I / II	 Sound / Title		
 Sleep	 Sleep / Timer		

