



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Red / Media	Red / Netflix / Search
Red / Media	Display / Media
Green / TV	Green / APP / Repeat
Green / TV	TV/Radio /
Yellow / Web	Yellow / YouTube / Repeat
Blue / APP	Blue / Prime Video / Random
Blue / APP	Smart / List
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+
Vol+	Vol+
Home	D.Menu / Top
Up / CH+	CH+ / Page+
Up / CH+	Up
Return	Back / Return

Original	Rechange
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down / CH-	CH- / Page-
Down / CH-	Down
Mouse	Info / Angle
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
1/A/a	Guide / EPG / -/-





 


 


Original		Rechange		Original		Rechange	
	0		0				
	<x]		Fav / Marker / PC				



 





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Red / Media	 Red / Netflix / Search
 Red / Media	 Display / Media
 Green / TV	 Green / APP / Repeat
 Green / TV	 TV/Radio /
 Yellow / Web	 Yellow / YouTube / Repeat
 Blue / APP	 Blue / Prime Video / Random
 Blue / APP	 Smart / List
 Vol-	 Vol-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Vol+	 Vol+
 Home	 D.Menu / Top
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Return	 Back / Return

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 Mouse	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 1/A/a	 Guide / EPG / -/-





Original		Recharge		Original		Recharge	
	0		0				
	<x]		Fav / Marker / PC				

